ALCATEL

Versatis C 650 / Versatis C 650 Duo/Trio

User's Guide

Contents of the package

Versatis C650:

The box contains the following elements:

- the base
- the handset
- the line cord
- the power supply
- the battery compartment cover
- the batteries
- the User’s Guide.

Versatis C650 duo/trio:

- the additional handset(s)
- the charger(s)
- the batteries
- the battery compartment cover(s).

Please **read this guide carefully** to get to know the main features of your **Versatis C650** and read the safety instructions before using it. We would also ask you to share the safety guidelines contained in this guide with all family members, and especially children.

Parents and those in charge of very young children are reminded that they must always be careful not to let children place any metallic objects or plastic items or parts in their mouths, except for safe eating utensils.

Versatis C 650 / Versatis C 650 Duo/Trio

The handset keys

- Take call
- Hands free

- Hang up
- Turn handset on / off (long press)
- Back to previous menu

- Access to operator services*

- In standby mode: open menu
- In menus: confirm selection
- During a call, cut the microphone (Mute)

- Correct / erase a character
- Intercom call
- Three-way call

- Open Received Calls list*

- Increase/decrease earpiece or hands-free volume

- Open Phonebook

- Open Dialled Numbers list

- Cut incoming call ringer

- Lock keypad

- Open quick-dial memories (long press)

Base keys and LEDs

Base key (paging)

- Short press: page handset
- Long press: register new handset

Flashing:

- Incoming call, or call in progress
- New message
- Registering handset

On steady:

- Handset charging on base

Off:

- No handset on base

- On: Do Not Disturb function enabled (ringer off)

- Do Not Disturb key

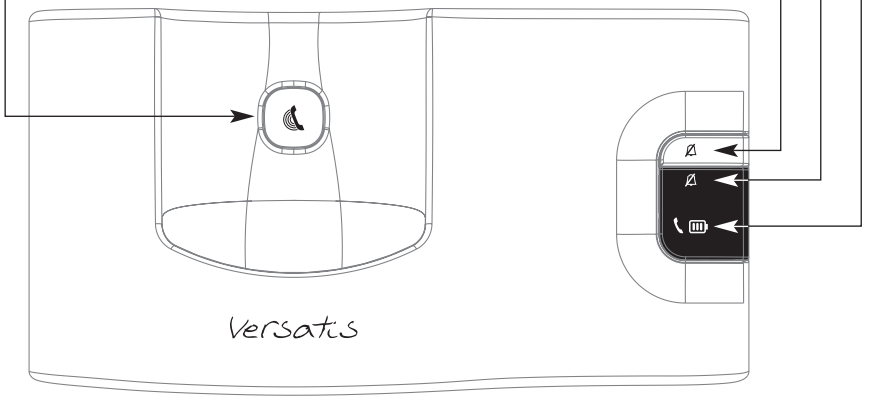

Main screen icons

- External call in progress
- New message on operator voicemail*
- Flashing: unanswered calls in the list*
- Flashes when out of range
- Battery charge level:
  - 3 segments: good
  - 2 segments: medium
  - 1 segment: needs recharging
- Hands-free enabled
- Alarm set
- Do Not Disturb function enabled

* Subject to technical availability and subscription from your operator.

1. FIRST USE 2
1.1 Installing the base 2
1.2 Installing the handset 2
1.3 Using the handset 3
2. USING THE TELEPHONE 4
2.1 Making a call 4
2.2 Answering a call 4
2.3 Hands-free mode 4
2.4 Redialling one of the last numbers called 4
2.5 Adjusting the earpiece volume 4
2.6 Do Not Disturb function 4
2.7 Secrecy / Mute (microphone off) 5
2.8 Locating a handset (Paging function) 5
3. YOUR PHONEBOOK 6
3.1 Using the Phonebook to make calls 6
3.2 Storing names and numbers 6
3.3 Inserting a pause in the dialling sequence (of a stored number) 6
3.4 Modifying names / numbers 6
3.5 Deleting names / numbers 7
3.6 Programming direct memory (quick dial) keys 7
4. USING YOUR VERSATIS C650 WITH THE OPERATOR'S VOICEMAIL SERVICE 8
4.1 Receiving voicemail messages 8
4.2 Listening to voicemail messages 8
5. IDENTIFYING CALLERS 9
5.1 Understanding caller ID data 9
5.2 Viewing the Calls list 9
5.3 Calls list: storing / deleting / recalling numbers 9
6. CUSTOMIZING YOUR HANDSET 10
6.1 Ringer tone 10
6.2 Ringer volume 10
6.3 Key tones 10
6.4 Equalizer 10
6.5 Auto-talk 10
6.6 Naming a handset 11
6.7 Selecting the language 11
6.8 Date and time 11
6.9 Alarm clock 11
6.10 Room monitor (applies only to multi-handset installations) 12
6.11 Keypad lock / unlock 12
7. BASE SETTINGS 13
7.1 Changing the PIN code 13
7.2 Default settings 13
7.3 Line settings 13
8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS 15
8.1 Registering a handset 15
8.2 Deregistering a handset 15
8.3 Using the intercom feature 15
8.4 Shuttling calls 15
8.5 Transferring an outside call to another handset 16
8.6 Three-way conference (2 internal parties and one external) 16
8.7 Answering an outside caller during an intercom call 16
9. TECHNICAL SPECIFICATIONS 17
10. TROUBLESHOOTING 18
11. SAFETY 19
12. ENVIRONMENT 20

1. FIRST USE

Your **Versatis C650** is a DECT™* standard appliance designed to receive and transmit telephone calls.

The **Versatis C650** is designed for connection to the public telecommunications network.

It requires an electrical power supply in order to function.

1.1 INSTALLING THE BASE

1.1.1 Precautions

As with all radio communications, the signal quality will depend on the location and environment of the base and handset.

Your DECT cordless telephone must be kept away from sources of excessive heat (radiators, direct sunlight, etc.) and protected against vibrations and dust. Never allow your telephone to come into contact with water or other liquids, or with aerosols.

To reduce the risk of interference and optimise reception, take particular care not to install the base in the immediate vicinity of windows, large metal objects, reinforced concrete, televisions, music centres, halogen lamps or heating devices, fluorescent lighting, burglar alarms, microwave ovens, computers, etc. If connecting your telephone to a line used by an ADSL modem, remember to use an ADSL filter.

To clean your set, use an antistatic cloth lightly moistened with water.

> ! ***For better listening quality, remove the protective film around the handset display(s) and earpiece(s).***

1.1.2 Connecting the base

- Connect the line cord and the power supply under the base, as shown.
- Plug the telephone jack into the wall socket.
- Connect the mains adapter to a 100/230 V / 50 Hz power supply.
- After a few seconds, the base beeps to confirm the connection.

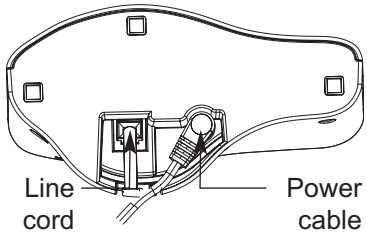

1.2 INSTALLING THE HANDSET

Fitting the batteries and charging up for the first time

Once the base is connected, insert the batteries in the compartment at the back of the handset. Follow the signs telling you which way round the batteries go.

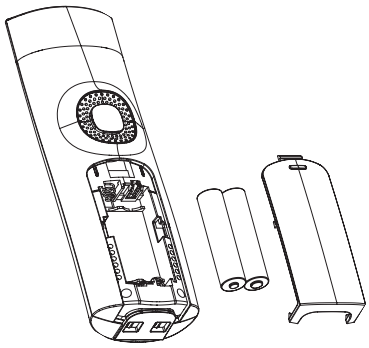

- Place the handset on the base. The blue light on the base comes on.
  - The battery charging icon on the telephone appears.

Before using for the first time, we recommend that you leave the handset to charge up on the base for 24 hours in order to optimise battery life and performance.

Check that the handset is registered on the base (icon not flashing) and take the line by pressing .

The dial tone confirms that the **Versatis C650** is working (if not, see Chapter 10).

> ! ***When the telephone is on standby, press any key to activate the handset.***
>
> ***If you remove and replace the batteries, the handset will not restart until it has been placed back on its base or charger.***

* DECT is a registered trademark of ETSI.

! ***Only use rechargeable batteries with exactly the same specifications as those supplied with the product.***

Using non-rechargeable or non-conforming batteries can damage the product and could pose a health hazard (see Chapter 9 "Technical Specifications").

Failure to comply with this recommendation will invalidate the manufacturer's warranty.

Batteries can split or leak if incorrectly inserted, opened or exposed to heat.

Never dispose of batteries in a fire: they could explode.

1.3 USING THE HANDSET

1.3.1 Navigating the menus

It's easy to configure and customise your cordless telephone using its scrolling menu feature:

- To open the menu, press the menu key OK MENU.
- Use the ▲ or ▼ keys to scroll through the options to find the one you want.
- To confirm an option, press OK MENU.
- To return to the previous menu, press ⏻.

1.3.2 Handset on/off

To turn your handset off:

- Press ⏻ (long press).
  - The display is off. You cannot make calls. If a call comes in, the handset will not ring; nor will the base, but the base LED will flash.

To turn the handset on again:

- Press ⏻ (long press) or place the handset back on its base.

2. USING THE TELEPHONE

2.1 MAKING A CALL

Direct dialling:

- Press , then dial the number to be called.

Pre-dialling:

- Dial the number, then press .
- Press to hang up at the end of the call.

2.2 ANSWERING A CALL

When the telephone rings, pick up the handset and press .

- Press to hang up at the end of the call.

- OR -

- If the auto-talk option is enabled, remove the handset from the base to take the call immediately.

Note: You can adjust the handset volume by pressing ▲ or ▼ during a call.

2.3 HANDS-FREE MODE

Note: If you use the hands-free mode, stay close to the handset so that your correspondent can hear you.

To activate hands-free mode, press .

To quit hands-free mode, press again.

To adjust the hands-free volume, use ▲ or ▼.

2.4 REDIALLING ONE OF THE LAST NUMBERS CALLED

The last 5 numbers dialled on your telephone are stored in memory.

To recall a correspondent:

- Press , then use ▲ or ▼ to select the number you want to call.
- Press to initiate the call.

2.5 ADJUSTING THE EARPIECE VOLUME

During a call, you can adjust the handset volume using the ▲ and ▼ keys: there are 5 volume settings.

2.6 DO NOT DISTURB FUNCTION

This function allows you to turn off the handset ringer by pressing on the base, even if the ringer volume of the handset(s) has been preset.

- In standby mode, press on the base.
- The LED under the key lights up (blue) and the handset display indicates ♪.
- To disable the function, press again.

Note: You can press to activate the function immediately, even as a call is coming in.

2.7 SECRECY / MUTE (MICROPHONE OFF)

To put your correspondent on hold while you talk to someone next to you.

- Press OK MENU during the call. The handset display indicates **MUTE ON**.
- Press OK MENU to cancel and get back to your correspondent.

2.8 LOCATING A HANDSET (PAGING FUNCTION)

Forgotten where you left your handset(s)?

- Press the key on the base.
  - The handsets associated with the base will ring for 30 seconds.
  - The line LED on the base flashes.
- Press to stop the ringer or press the key on the base again.

3. YOUR PHONEBOOK

Each handset can hold up to fifty Phonebook entries. Each entry or 'record' contains the name and number of a correspondent.

3.1 USING THE PHONEBOOK TO MAKE CALLS

- Press OK MENU to go to the main menu.
- Use ▲ or ▼ to select **PHONE BOOK**.
- Press OK MENU to open the Phonebook submenu.
- Use ▲ or ▼ to select **VIEW RECORDS**.
- Press OK MENU to confirm; all the records appear in alphabetical order.
- Press ▲ or ▼, or the first letter of the name you are looking for, to view the record.
- Press ☎ to initiate the call.

3.2 STORING NAMES AND NUMBERS

- Press OK MENU and use ▲ or ▼ to select **PHONE BOOK**; press OK MENU to confirm.
- Use ▲ or ▼ to select **ADD RECORDS**.
- Press OK MENU to confirm. The display reads **ENTER NAME**.
- Use the keypad to enter a name.

Note: If you make a mistake, press C INT to erase the erroneous character(s).

- Press OK MENU again to save. The display reads **ENTER NUMBER**.
- Use the keypad to enter the telephone number, and press OK MENU to confirm.
- Use ▲ or ▼ to select one of the 10 ringer options (an extract of each ringtone or melody is played as you scroll through).
- Press OK MENU to confirm; the records are stored in alphabetical order in the Phonebook.

3.3 INSERTING A PAUSE IN THE DIALLING SEQUENCE (OF A STORED NUMBER)

Press # twice in rapid succession on the handset keypad to insert a break in the dialling sequence when a pause is needed to wait for a dial tone (for example, after dialling 9 for an outside line, or to wait for a computer access tone). Each pause counts as a digit in the dialling sequence.

3.4 MODIFYING NAMES / NUMBERS

- Press OK MENU, use ▲ or ▼ to select **PHONE BOOK** and press OK MENU to confirm.
- Use ▲ or ▼ to select **EDIT RECORDS**.
- Press OK MENU to confirm; the records appear on the display.
- Use ▲ or ▼ or enter the first letter of the name you are looking for, and press OK MENU to confirm.
- The display reads **ENTER NAME**. Modify the name if necessary by pressing C INT and press OK MENU to confirm.
- The display reads **ENTER NUMBER**. Modify the number if necessary by pressing C INT and re-entering it, then press OK MENU to confirm.

3.5 DELETING NAMES / NUMBERS

- Press OK MENU, use ▲ or ▼ to select **PHONE BOOK**, and press OK MENU to confirm.
- Use ▲ or ▼ to select **DELETE RECORDS**.
- Press OK MENU to confirm; the records appear on the display.
- Use ▲ or ▼ or enter the first letter of the name you are looking for, and press C INT. The display reads **DELETE ?**.
- Press OK MENU to confirm.

Note: If you decide not to delete or modify a record, press ⏻, or wait a minute for the menu to close automatically.

3.6 PROGRAMMING DIRECT MEMORY (QUICK DIAL) KEYS

You can store numbers in memory on keys 1, 2 ABC and 3 DEF.

- Press OK MENU to open the menu.
- Select **DIALING SETUP** and press OK MENU to confirm.
- Select **DIRECT MEM** and press OK MENU to confirm.
- Select **KEY 1**, **KEY 2** or **KEY 3** and press OK MENU to confirm.
- To erase the existing number, press C INT to confirm.
- Dial the number to be memorized, and press OK MENU to confirm.

Using the quick dial keys

A long press (two seconds) on 1, 2 ABC or 3 DEF automatically dials the stored number.

4. USING YOUR VERSATIS C650 WITH THE OPERATOR'S VOICEMAIL SERVICE*

By subscription to your operator, you can have your calls diverted to a voicemail box when you are absent or already on the line. New messages are indicated by an icon on the display. For more details, contact your operator.

4.1 RECEIVING VOICEMAIL MESSAGES

When new messages are received, the base and handset LEDs flash and the ☌ icon appears on the handset display. The icon disappears once you have consulted the voicemail.

If this doesn't happen automatically:

- Press OK MENU to open the menu.
- Select **RESET SETTINGS** and press OK MENU to confirm.
- Select **VOICEMAIL** and press OK MENU to confirm.
- Select **YES** and press OK MENU to confirm.

The ☌ icon disappears, and the handset LED ☼ goes out, as does the base light.

Note: If you have a Duo or Trio version, the icon will remain on the display on the other handsets. Follow the same procedure on each handset to make it disappear.

4.2 LISTENING TO VOICEMAIL MESSAGES

When new messages are received, to open your voicemail:

- Dial the voicemail server number provided by your operator.
- Press 📞.

* Requires subscription to the caller identification service, subject to technical availability.

5. IDENTIFYING CALLERS*

5.1 UNDERSTANDING CALLER ID DATA

If you are subscribed to your operator's Caller ID service, and if the network transmits the relevant data, the caller's name or number will be shown on the display as indicated below.

The numbers, dates and times of incoming calls are recorded in the Received Calls list.

During the call, the following messages (from the network) are displayed:

- the caller name and number, if the number is stored in your Phonebook or transmitted by the network;

- the caller number, if not listed in your Phonebook;

- **PRIVATE** if the caller is using Caller ID Blocking to avoid identification;

- **UNAVAILABLE** if the name or number cannot be transmitted by the network.

5.2 VIEWING THE CALLS LIST

If the list contains new calls, the icon flashes on the display.

- Press .
- Scroll through the list using the and keys.
- Press to quit the list.

5.3 CALLS LIST: STORING / DELETING / RECALLING NUMBERS

5.3.1 Calling back a correspondent from the Calls list

- Press or to select the caller.
- Press to initiate the call.

5.3.2 Storing a number from the Calls list in the Phonebook

With the number showing on the display:

- Press to display **ENTER NAME**, confirm or key in the name and press OK MENU to confirm.
- Save the number by pressing OK MENU to confirm.
- Using the navigator, choose the ringtone/melody you want to associate with the contact and press OK MENU to confirm.

5.3.3 Deleting a record from the Calls list

With the number showing on the display:

- Press C INT. The display reads **DELETE CALL ID?**.

Note: Press to return to the previous menu without deleting the record from the Calls list.

- Press C INT to delete the record shown.

5.3.4 Deleting all of the records from the Calls list

- Use or to display any record in the Calls list.
- Press C INT and hold it down until the display reads **DELETE ALL?**.

Note: Press to return to the previous menu without deleting all of the records from the Calls list.

- Press C INT to delete all of the Calls list records (except the operator voicemail data).

* Subject to subscription and technical availability.

6. CUSTOMIZING YOUR HANDSET

6.1 RINGER TONE

You can choose between five ringtones and five melodies.

- Press OK MENU.
- Use ▲ or ▼ to select **SOUND SETUP** and press OK MENU to confirm.
- Press ▲ or ▼ to select the **RINGER TONE** submenu.
- Press OK MENU to open the menu. The display reads ▸ **1/10**. The default setting is 7/10.
- Use ▲ or ▼ to select an option (from 1 to 10). An extract of the selected ringtone/melody is played.
- Press OK MENU to save the selection.

6.2 RINGER VOLUME

In the Sound Setup menu:

- Press ▲ or ▼ to select the **RINGER VOLUME** submenu.
- Press OK MENU to open the menu. The display reads ▸ **RING VOLUME 5**.
- Use ▲ or ▼ to select the desired volume. The default setting is level 5.
- Press OK MENU to save the selection.

Note: If you set the volume to **RINGER OFF**, the corresponding icon appears on the display.

6.3 KEY TONES

In the Sound Setup menu:

- Press ▲ or ▼ to select the **KEY TONE** submenu.
- Press OK MENU to open the menu. The display reads **> ON/OFF**.
- Use ▲ or ▼ to select the preferred option. The default setting is **ON**.
- Press OK MENU to confirm.

6.4 EQUALIZER

For optimal listening quality, you can increase the bass or treble.

In the **SOUND SETUP** menu:

- Press ▲ or ▼ to select the **EQUALIZER** submenu and press OK MENU to confirm.
- Select **BASS** or **TREBLE** (the default is **NATURAL**) and press OK MENU to confirm.

6.5 AUTO-TALK

This function enables you to pick up calls by lifting the handset off the base, without having to press a button. To end the call, simply replace the handset on the base.

In the Initial Setup menu:

- Press ▲ or ▼ to select the **AUTO TALK** submenu.
- Press OK MENU to open the menu. The display reads **> NO/YES**.
- Use ▲ or ▼ to select the preferred option. The default setting is **YES**.
- Press OK MENU to confirm your choice.

6.6 NAMING A HANDSET

In the Initial Setup menu:

- Press ▲ or ▼ to select the **HANDSET NAME** submenu.
- Press OK MENU to open the menu. The display reads **HANDSET NAME**.
- Use the keypad to enter a name.

Note: To make a correction, press C INT.

- Press OK MENU to save the name. The set beeps to confirm and the handset name appears on the display.

6.7 SELECTING THE LANGUAGE

In the Initial Setup menu:

- Press OK MENU to select the **LANGUAGE** submenu.
- Press OK MENU to open the menu.
- Use ▲ or ▼ to select a language. The default setting is **ENGLISH**.
- Press OK MENU to save. The set beeps to confirm.

6.8 DATE AND TIME

In the Initial Setup menu:

- Press ▲ or ▼ to open the **DATE AND TIME** submenu.
- Press OK MENU to open the menu. Use the keypad to enter the year (YEAR:2008), use ▲ or ▼ to set the date. Enter the date in dd/mm format.
- Press OK MENU to confirm and move on to the **SET TIME** submenu.
- Use the keypad to enter the hour and minutes (hh:mm format).
- Press OK MENU to save.

6.9 ALARM CLOCK

- Press OK MENU to open the main menu.
- Use ▲ or ▼ to select **ALARM CLOCK**.
- Press OK MENU to open the menu. The display reads **ON > OFF**.
- Use ▲ or ▼ to select **ON** or **OFF**. Press OK MENU to confirm.
- If **ON** is selected, the display reads **SET ALARM TIME**. Use the keypad to enter the alarm time (hh:mm format).
- Press OK MENU to display **> ONCE OR DAILY** then select **ONCE** or **DAILY** with the ▲ or ▼ keys.
- Press OK MENU to save.

6.10 ROOM MONITOR (APPLIES ONLY TO MULTI-HANDSET INSTALLATIONS)

- Press OK MENU to go to the main menu.
- Press ▲ or ▼ to select **ROOM MONITOR**.
- Press OK MENU to open the **ROOM MONITOR** menu.

The display reads **ROOM MONITOR**.

Using the keypad, enter the number of the handset to be monitored.

Note: If you activate the Room Monitor function using handset 1, you need to put handset 2 or 3 in the room you want to monitor.

> ! ***Do not place the handsets side by side.***

Note: For Room Monitor mode to work, the initial handset must NOT be on the base.

Note: In Room Monitor mode, the handsets give off a beep approximately every 5 seconds if a call comes in. Simply press to quit Room Monitor mode and take the call.

Note: In Room Monitor mode, the initial handset can be switched to acting as a room monitor by pressing once. To return it to loudspeaker mode, press once.

Note: Press on the handset to quit Room Monitor mode.

6.11 KEYPAD LOCK / UNLOCK

To avoid accidentally pressing keys on the handset when it is not on its base, you can temporarily lock the keypad (you can still receive calls).

To lock the keypad:

- Long press on *.
  - **KEYPAD LOCKED** appears on the display.

To unlock the keypad:

- Long press on *.

7. BASE SETTINGS

7.1 CHANGING THE PIN CODE

The system PIN is used for registering new handsets with your **Versatis C650**.

- Press OK MENU to open the menu.
- Select **INITIAL SETUP** using the navigation keys and confirm.
- Select **CHANGE PIN** using the navigation keys and press OK MENU to confirm.
  - The display reads **OLD PIN CODE _ _ _ _**.
- Enter the 4 digits of the current PIN (by default, **0000**) and press OK MENU to confirm.
  - The display reads **NEW PIN CODE**.
- Enter the 4 digits of the new code and press OK MENU to confirm.
  - The display reads **CONFIRM NEW**.
- Enter the 4 digits of the new code and press OK MENU to confirm.

7.2 DEFAULT SETTINGS

You can always go back to your telephone's factory settings.

- Press OK MENU to go to the main menu.
- Press ▲ or ▼ to select **RESET SETTINGS**.
- Press OK MENU to confirm. The following elements can now be programmed: **VOICEMAIL** or **ALL SETTINGS**.

7.2.1 All settings

Once you are familiar with the telephone, you may prefer to use the initial (default) settings. To return to the default settings, simply:

In the Reset Settings menu

- Press ▲ or ▼ to select the **ALL SETTINGS** submenu.
- Press OK MENU to open the menu. The display reads **YES ▸ NO**. The default setting is **NO**.
- Use ▲ or ▼ to select **YES** or **NO**.

Note: If you select **YES**, all the programmable menu settings are restored to their default values.

- Press OK MENU to save.

7.3 LINE SETTINGS

7.3.1 Setting the recall or flash time (R key)

The default recall time value is **600 ms**.

- Press OK MENU to open the menu.
- Select **DIALING SETUP** using the navigation keys and confirm.
- Select **FLASH TIME** using the navigation keys and confirm.
- Select **SHORT** (100 ms), **MED** (270 ms) or **LONG** (600 ms) using the navigation keys and press OK MENU to confirm.

7.3.2 Call barring

You can prevent certain numbers from being dialled.

- Press OK MENU to open the menu.
- Select **DIALING SETUP** and press OK MENU to confirm.
- Select **CALL BARRING** and press OK MENU to confirm.
- Enter the code (by default, 0000) and press OK MENU to confirm.
- Use ▲ or ▼ to select **ON** and press OK MENU to confirm (the default value is **OFF**).
- Select **CALL BARRING 1**, **CALL BARRING 2**, **CALL BARRING 3**, **CALL BARRING 4** and press OK MENU to confirm.
- Enter the call prefixes (1 to 3 digits) to be barred on outgoing calls and press OK MENU to confirm.

Note: **CANNOT DIAL / NUMBER BARRED** appears on the display if a number is dialled that starts with a barred call prefix.

8. USING YOUR TELEPHONE WITH MULTIPLE HANDSETS

8.1 REGISTERING A HANDSET

The handset(s) delivered with your **Versatis C650** will already be registered on the base, ready to use. You can have up to 6 handsets associated with ("registered on") the base of your telephone. To add another handset, follow the registration procedure below.

In the Initial Setup menu:

- Press ▲ or ▼ to select the **REGISTRATION** submenu.
- Press OK MENU to open the menu. The display reads **YES** ▸ **NO**. The default setting is **NO**.
- Use ▲ or ▼ to select **YES**.
- If **YES** is selected, press OK MENU. The display reads **HOLD BASE FIND KEY FOR 5 SECS**. Press and hold down on the base; the indicator flashes, then press OK MENU. (The handset must be close to the base during the registration process). Enter the PIN (by default, 0000) and press OK MENU to confirm.
- Press OK MENU. The display reads **REGISTERING…**, then **REGISTERED**.

8.2 DEREGISTERING A HANDSET

This procedure must be carried out on a different handset from the one you want to uninstall.

In the Initial Setup menu:

- Press ▲ or ▼ to select the **DEREGISTRATION** submenu.
- Press OK MENU to open the menu. The display reads **YES** ▸ **NO**. The default setting is **NO**.
- Utiliser ▲ or ▼ to select **YES**.
- Press OK MENU ; the message **MOVE NEAR TO THE BASE** appears for a few seconds, then **YES NO** appears on the display.
- Use ▲ or ▼ to select **YES** or **NO**.
- If you select **YES**, press OK MENU to confirm. Enter the PIN (by default, 0000). The display reads **DE-REGISTER...** The set beeps to confirm. Then the display indicates **DEREGISTERED** to confirm that the handset has been successfully uninstalled.

Note: Once the deregistration process is finished, the message **HANDSET NEEDS REGISTRATION** appears on the display. To use the handset again, you MUST re-register it using the registration process.

8.3 USING THE INTERCOM FEATURE

- Press C INT on the handset.
- Using the keypad, select the handset you want to call (Trio version only).
- The called handset rings. Its display shows **PAGING FROM** followed by the name of the calling handset.
- Press to answer.
- When you have finished, press on either handset to quit intercom mode.

8.4 SHUTTLING CALLS

While on the line with an external correspondent, you can call an internal handset:

- Press C INT, dial the number of the handset you want to call (Trio version only).
  - ▸ The external correspondent is placed on hold.
  - ▸ The two internal correspondents can talk to each other.
- To get back to the external correspondent, press .

8.5 TRANSFERRING AN OUTSIDE CALL TO ANOTHER HANDSET

You can pass an external call over to another handset.

- Press C INT on the handset to put the external call on hold, and dial the number of the handset you want to call (Trio version only).
- When the internal handset answers, press to transfer the call.

8.6 THREE-WAY CONFERENCE (2 INTERNAL PARTIES AND ONE EXTERNAL)

- During an external call, press C INT. The display reads **PAGING LINE ON HOLD**.
- Using the keypad, dial the number of the handset you want to call (Trio version only).
- When the internal handset answers, press C INT to set up the conference call. The display on the handsets reads **CONFERENCE**.

To switch to intercom mode and put the external correspondent on hold, press #. To return to 3-way conference mode, press # again.

8.7 ANSWERING AN OUTSIDE CALLER DURING AN INTERCOM CALL

When you are in intercom mode with another handset, you can still take outside calls.

To pick up a call:

- Press .
  - The intercom call is interrupted.
- Press .
  - You are put through to the outside caller.

9. TECHNICAL SPECIFICATIONS

Free field range	Up to 300 meters*
Indoor range	Up to 50 meters*
Handset battery life (average values)	6 hours talktime** 100 hours standby**
Number of handsets	Up to 6
Intercom mode	Yes
Three-way conference (1 outside correspondent + 2 internal correspondents)	Yes
Electrical connection / Base mains adapter / Charger	Model IA5060G Input: 100-240 V AC / 50-60 Hz / 0.2 A Output: 6 V DC / 500 mA Model DM-SC060050 Input: 100-240 V AC / 50-60 Hz / 0.1 A Output: 6 V DC / 0.5 A Or model IA5060B (for UAE & FS versions) Input: 100-240 V AC / 50-60 Hz / 0.2 A Output: 6 V DC / 500 mA Only use the adapters supplied with the telephone. Single-phase AC, excluding IT installations defined by the EN 60950 standard. Caution: the network voltage is classified as a hazard by the criteria of this standard.
Telephone connection	Appliance designed for connection to a TNV3 class (telecommunications network voltage) analogue telephone line as defined by the EN 60950 standard.
Batteries	AAA – 1.2 V – 500 mAh Only use the batteries supplied with the telephone. Using any other type of battery presents a risk of explosion. Used batteries must be disposed of in compliance with current environmental protection regulations.
Operating temperature	From 5 to 40° C

* Value may vary according to environment.

** Depending on initial battery charge.

10. TROUBLESHOOTING...

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.

Problem	Cause	Solution
Nothing appears on the display.	The device is not powered up.	Check the power supply connection.
	The battery is flat.	Put the handset back on its base to recharge the battery.
	The main screen is in standby.	Press any key on the keypad to reactivate it.
There is no dial tone.	The handset is not registered on the base.	See Section § 8.1.
	The battery is flat.	Put the handset back on its base to recharge the battery.
	The device is not connected to the telephone network.	Check that the phone cord is properly connected.
	The handset is out of range of the base.	Move nearer to the base.
	The line cord is incompatible.	Use the cord supplied with the telephone.
The reception quality is poor, or deteriorates during a call.	You are out of range of the base or in an environment subject to interference.	Move nearer to the base, or move the base.
	You have an Internet connection box (modem).	Connect an approved ADSL filter between the phone connector and the wall socket.
Your correspondent can't hear you.	The microphone is off: the Secrecy/ Mute function is active.	See Section § 2.7.
The handset doesn't ring.	The handset ringer is off.	See Section § 6.2.
The battery is still flat after several hours on charge.	The base or charger is not powered up.	Check your power supply connections.
	The handset battery is defective.	Contact our Technical service if the telephone is under warranty, or ask your reseller to supply you with a new battery.

The store where you bought your telephone can also provide you with information and after-sales support.

11. SAFETY

In the event of an electrical hazard, the mains adapter acts as 230V power isolating device. It should therefore, as a precaution, be installed close to the appliance and be easily accessible. To disconnect the device from the primary power source, the mains adapter must be removed from the 230V AC / 50 Hz socket.

If the mains adapter fails, it must be replaced by an identical model.

If not connected to the mains power, or if there is a mains power failure, telephones that use cordless handsets will not work.

You will then be unable to make or receive calls in the event of an emergency.

This is why we recommend that you also keep a conventional telephone – one that doesn't require a power supply – as a backup.

> ! ***Do not use your telephone to notify a gas leak when standing in the vicinity of the leak.***

It is recommended that you avoid using this device during electrical storms.

Do not attempt to open the batteries, as they contain chemical substances. In the event of battery leakage, avoid contact with the skin, eyes, nose and mouth. In the event of contact, rinse the affected part for about twenty minutes with running water and seek urgent medical attention. Clean the telephone with absorbent paper or a dry cloth and contact your reseller for replacement batteries.

ATLINKS hereby declares that the **Versatis C650** conforms to the essential requirements and other applicable provisions of European directive 1999/5/EC.

CE

12. ENVIRONMENT

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which producers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused. Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

- If you are a professional user, please follow your supplier's instructions.

- If the appliance is rented to you or left in your care, please contact your service provider.

Keen to preserve the environment, ATLINKS has equipped this appliance with a switching power supply, offering better energy efficiency. The advantages include not only very low electricity consumption, but also a more compact format than the conventional power supply units used by the previous range.

The used batteries from your telephone (if it has batteries) must be disposed of in compliance with current environmental protection regulations. Comply with your local regulations. Return your batteries to your reseller or dispose of them at an approved recycling centre.

Help us protect the environment in which we live!

ATLINKS

CE

R&TTE DECLARATION OF CONFORMITY (DOC)

We,

ATLINKS EUROPE
22, Quai Gallieni
92150 SURESNES
FRANCE

Declare under our sole responsibility that the products Alcatel Versatis C650, Alcatel Versatis C650 Duo and Alcatel Versatis C650 Trio comply:

- With the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC) based on the following standards and other normative documents:
  - EN 60950-1:2006
  - EN 301406 V2.1.1 (2009)
  - EN 301489-01 V1.8.1:2008 / EN 301489-06 V1.3.1:2008

- With Commission regulation (EC) N° 278/2009 of April 6, 2009 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for no-load condition electric power consumption and average active efficiency of external power supplies

- With Commission regulation (EC) no. 1275/2008 of December 17, 2008 implementing Directive 2005/32/EC of the European Parliament and of the Council with regard to ecodesign requirements for standby and off mode electric power consumption of electrical and electronic household and office equipment.

This conformity is understood as being effective if the product for which it is given is installed and used according to the instructions provided in the user's guide.

Paris, August 3rd, 2010
Didier GOUJARD
CEO ATLINKS EUROPE

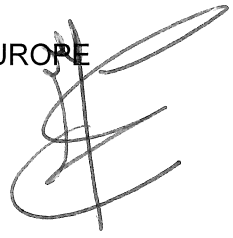

ATLINKS Europe

22, Quai Gallieni - 92150 Suresnes - France

**S.A.S. (Simplified Joined Stock Company) with capital of 500 000 euros -
Registration number: 508 823 747 R.C.S. Nanterre**

© ATLINKS 2010 - Reproduction prohibited.
The manufacturer reserves the right to modify the specifications of its products in order to make technical improvements or comply with new regulations.
ALCATEL and VERSATIS are registered trademarks.
The Alcatel logo and Alcatel name are trademarks of Alcatel and used under licence by ATLINKS.

Réf. : xxx xxx xxxxx 18/11/10